


ST-161 Spare Part List

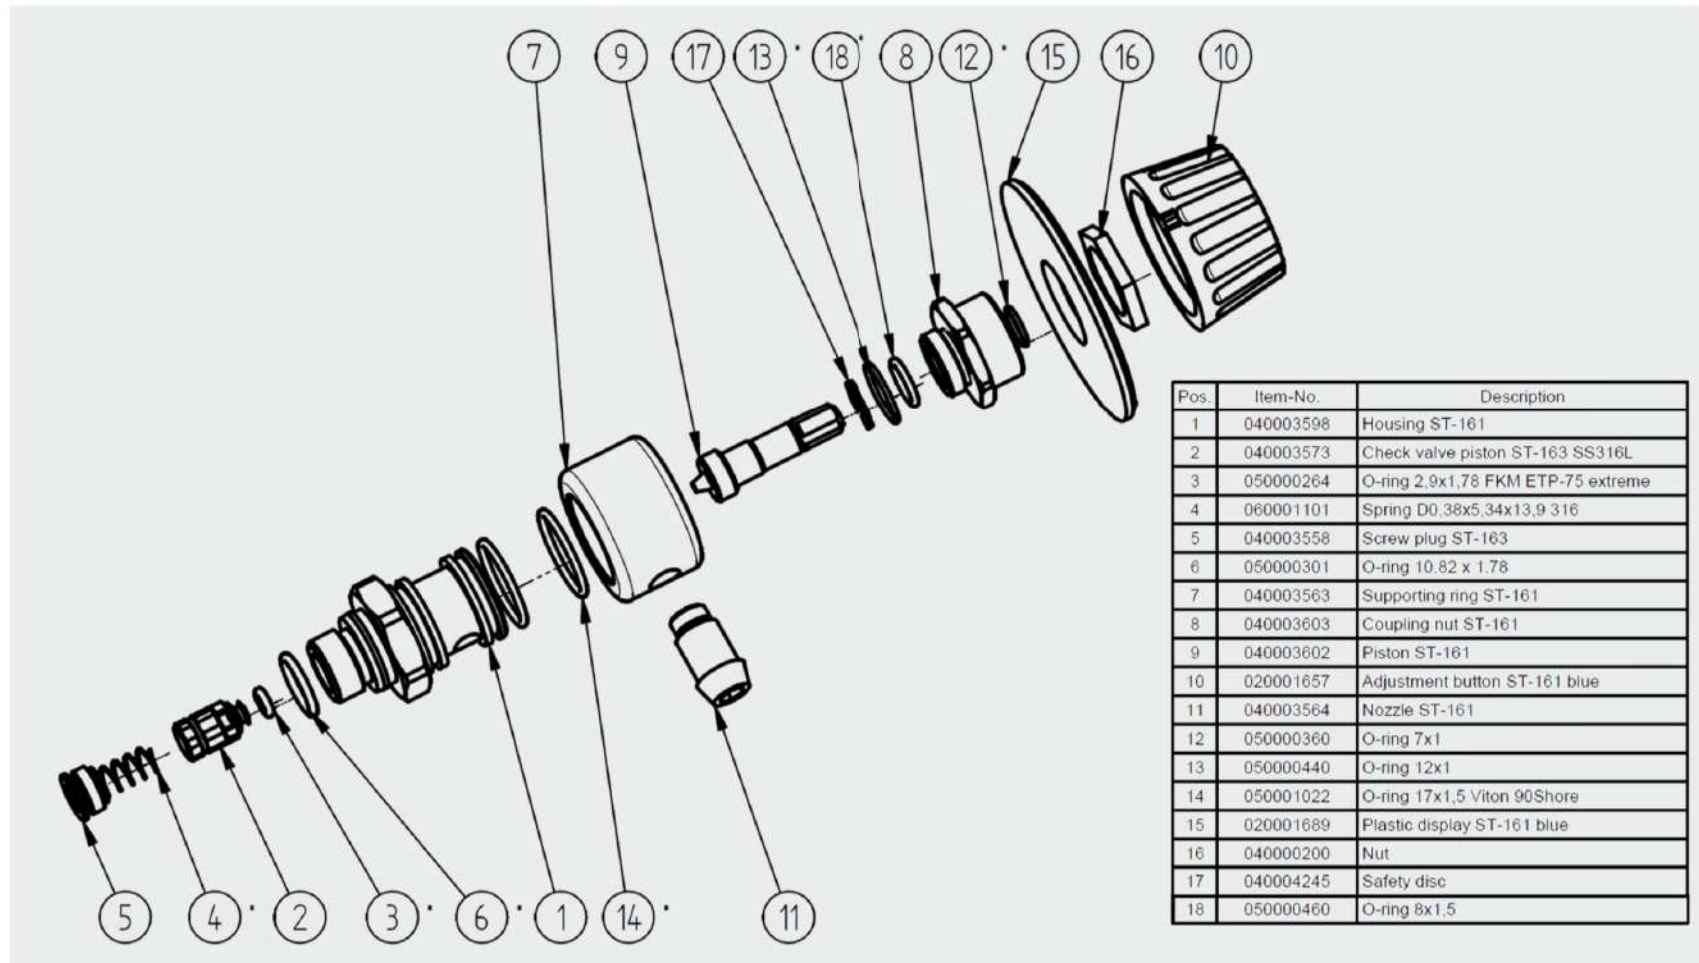

Pos.	Item-No.	Description
1	040003598	Housing ST-161
2	040003573	Check valve piston ST-163 SS316L
3	050000264	O-ring 2,9x1,78 FKM ETP-75 extreme
4	060001101	Spring D0,38x5,34x13,9 316
5	040003558	Screw plug ST-163
6	050000301	O-ring 10,82 x 1,78
7	040003563	Supporting ring ST-161
8	040003603	Coupling nut ST-161
9	040003602	Piston ST-161
10	020001657	Adjustment button ST-161 blue
11	040003564	Nozzle ST-161
12	050000360	O-ring 7x1
13	050000440	O-ring 12x1
14	050001022	O-ring 17x1,5 Viton 90Shore
15	020001689	Plastic display ST-161 blue
16	040000200	Nut
17	040004245	Safety disc
18	050000460	O-ring 8x1,5