


# Pump Support Foot Installation Guide


1. Locate / drill hole under flat portion of pump body.

2. Insert adjustable foot into frame with nut and washer all the way to the top of foot thread.

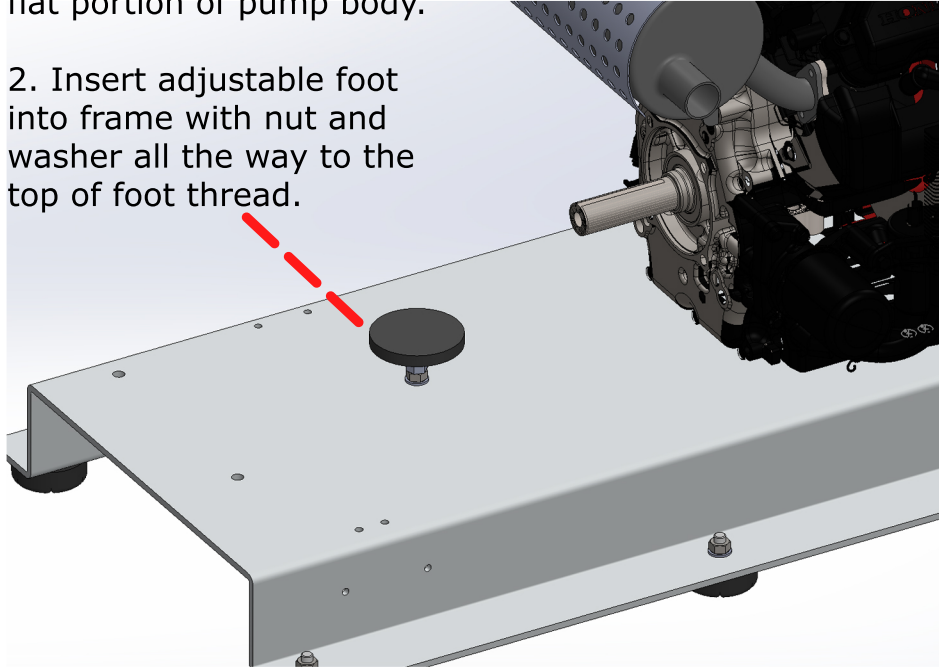


3. Install pump and gearbox kit.

4. Ensure foot fits flat on bottom of pump body.

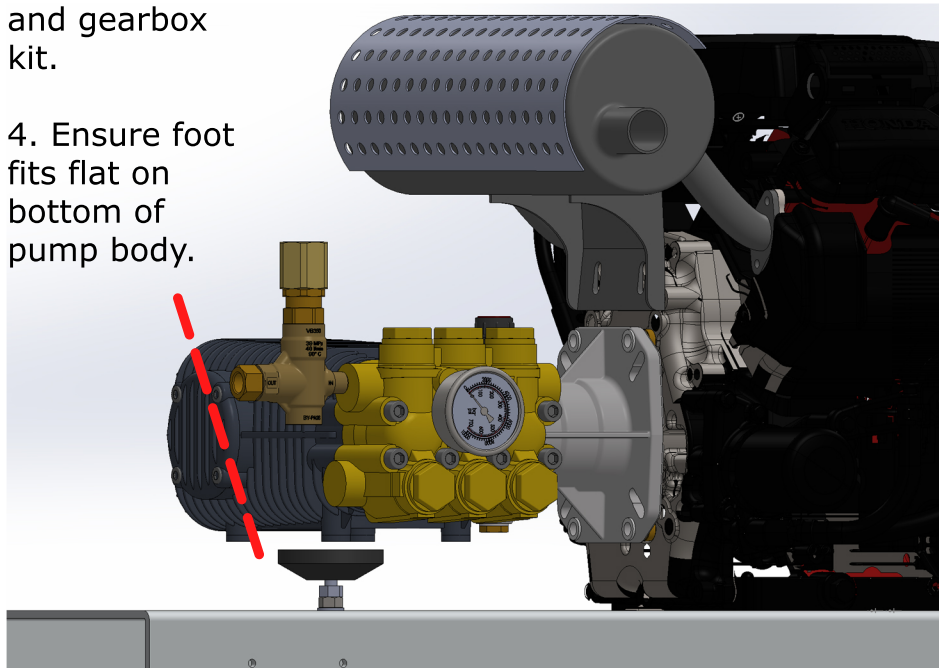

5. Adjust nut so foot and pump body gently contact.

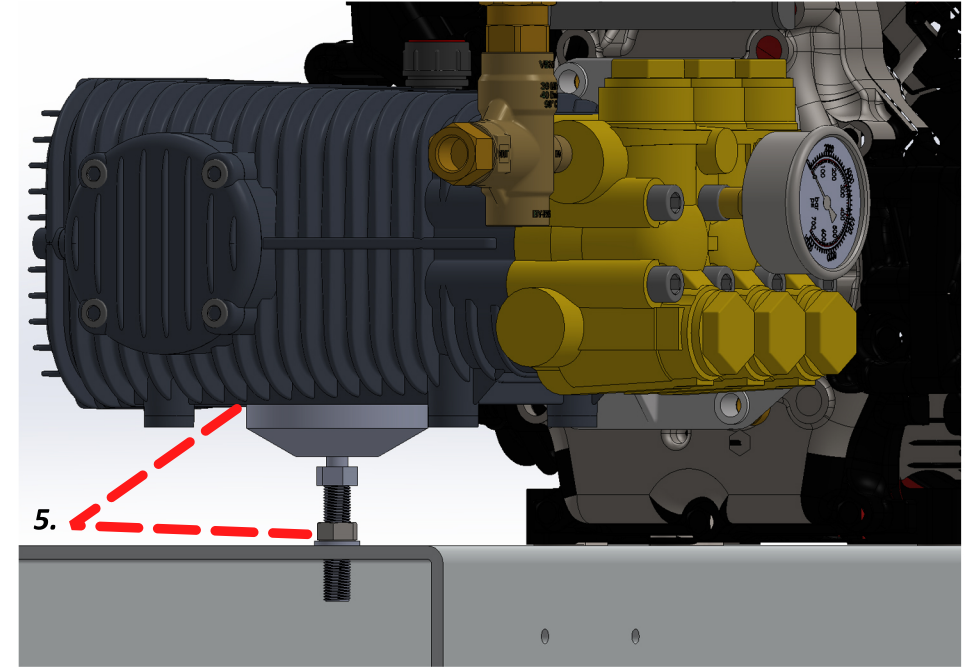

6. Attach nut and washer to the bottom of foot, tighten so foot is secure.

