



POWER EQUIPMENT

COMMERCIAL EVAPORATIVE COOLER OWNER'S MANUAL

Model: CEC230



SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

INSTRUCTION

Thank you for purchasing a BE evaporative cooler. We trust it will give you comfort and convenience.

The cooler is a high-tech product, showing simplicity and outstanding reliability, due to its European design origin.

Its working principle is that water evaporation uses up the surrounding heat and causes the temperature to cool down.

When water is continuously distributed onto the cooling pad surface, the air being drawn through the pad causes the water to evaporate, making the air cooler and fresher. The circulating water moves down to the reservoir, where it is again pumped up by the water pump. If the hose option is being used (supplied as standard), a float valve keeps the reservoir full continuously. If filled manually, the big 100 Litre capacity reservoir ensures hours of uninterrupted operation. There is a digital level indicator to quickly check the amount of water remaining.

APPLICATIONS

This cooler is currently being used in many different industries and applied in many countries.

(Company offices, shops, hospitals, schools, workshops, workers dormitories, outdoor teahouse/coffee bars, restaurants, recreation facilities.)

Manufacturing:

Textile, machinery, ceramic, refined chemical industries, metallurgy, hardware and leather industries.

Industrial processing:

Electronics, clothes & shoe making, plastics, food industries, packaging.

Others:

Indoor sports courts, bakeries, playgrounds, laundries, kitchens, vegetable markets, gymnasiums, underground parking lots, greenhouses, chicken and pig farms, gardens. The list goes on...

TECHNICAL SPECIFICATION

MODEL	CEC 230
Max Airflow (m ³ /h)	23000
Power Supply / Frequency (V/Hz)	240V /50H z
Power Consumption (W)	750
Fan Style	Axial
Water Consumption (L/H)	10-15
Water Capacity (L)	120
Dimenbsion (L*W*H)(mm)	1130x680x1510
Weight (kg)	68
Effective Cooling Area (m ²)	100-150
Noise Level dB(A)	70
Amp Draw (A)	4.5

TECHNICAL FEATURE



New evaporqative cooling pad, energy saving and environmentally friendly.



3 levels fan speed (low, medium & high).



Low noise.



Large capacity water tank for longer operating hours.



Swing function.



Large wheels and brake allow easy movement.



Time setting function.



Micro-computer program control, LCD panel.



More convenient with remote controller.

KEY FEATURES

Energy-saving & Environmentally-friendly

- Reliable operation
- Cools a large area
- Quiet running
- Adjustable speed
- Automatic swing function – standard.
- Full function remote controller.
- Large water tank for extended time between fills.
- No need for compressed air.
- No installation,no duct work required..
- Easy to use,easy to clean.
- Body is corrosion-proof plastic.
- Easy to maintain.
- Fully portable.
- Can be attached to standard garden hose.
- Time function for auto start or auto stop.

IMPORTANT REMINDERS

Please read the manual carefully before operating the cooler.

A. Operating conditions:


1. Temperature: 18°C to 45°C; Water temperature: <45 .
2. Power supply must not exceed the required voltage (+/-) 5%.
3. Air supply must be largely free of dust or extra cleaning is required.

B. Protect the power cable from vehicle or foot traffic. Connection to incorrect electric voltage, or faulty installation, will cause danger of electric shock.

C. Other tips for cooler use:

1. Keep doors and windows open to allow fresh air to enter, and treated air to exit, when cooler is operating.
2. Flashing red light on the control panel means water level in resercoir is low.
3. Rinse the reservoir with fresh water and clean prior to use after a period when the cooler has not been in operation.
4. Take care when moving the cooler, especially when it is full of water. Pushing too hard will cause the cooler to overbalance and tip over, which may cause injury nad will damage the cooler.
5. To prevent buildup of algae and other biological organisms in the reservoir, regularly add chlorine/bromine tablets as per tablet manufacturer recommendation for evaporative cooler reservoirs.

KEY COMPONENTS

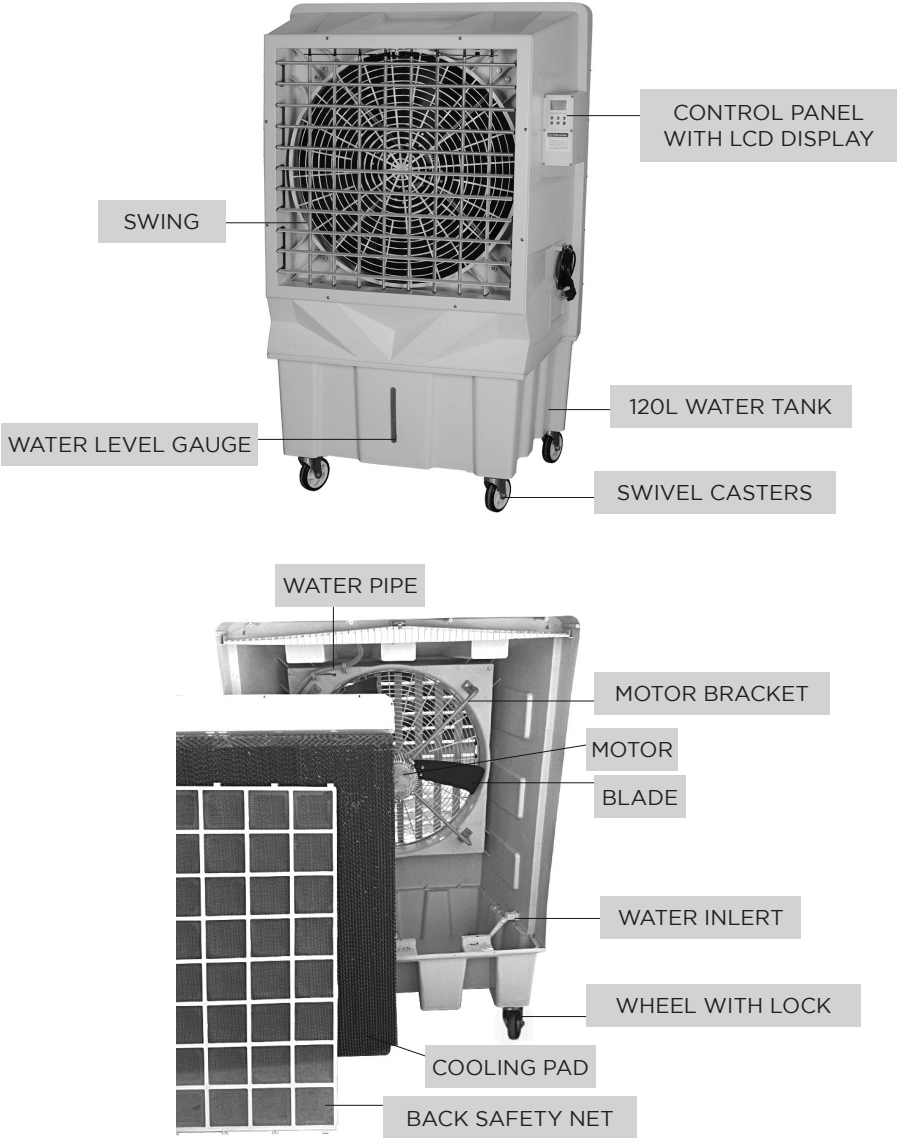


OPERATION INSTRUCTION

WARNING


1. All electrical repairs must only be carried out by a suitably qualified electrician, after all power is disconnected.
2. All the instructions state that the guard has to be removed for cleaning purpose, the instructions shall state the substance of following: ensure that the fan is switched off from the supply mains before removing the guard.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Water Pressure: 0.1 Mpa (+/-) 10%

Keypad Instruction	Comment
ON/OFF	This turns the cooler on or off.
COOL	This activates the cooling function. Note that there is a delay of one minute before the fan starts while the cooling pads wet up.
SPEED	Pressing SPEED will select low, medium or high fan speed.
SWING	This activates/deactivates swing function.
TIMER Dealyed Start	This timer setting can be used to start the cooler after a certain number of hours delays. When only the green POWER light is on, press TIMER until the number of hours delay (1-24) is shown.
TIMER Automatic Stop	When the cooler is already going, press timer to set the number of hours (1-24) until the machine will automatically switch off.
WATER Supply	Use only clean, fresh water. Pour water into the water inlet on the right hand side of the unit (max 100L). Alternatively, attach a hose to the water inlet on the left side for automatic filling. Note a pressure reducing valve is recommended for high pressure water supplies.

KEY COMPONENTS

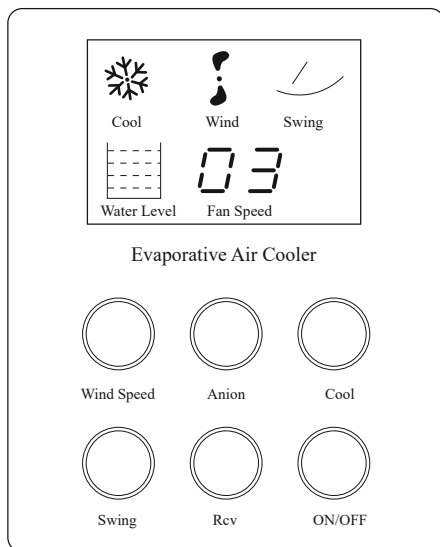

REMOTE CONTROLLER

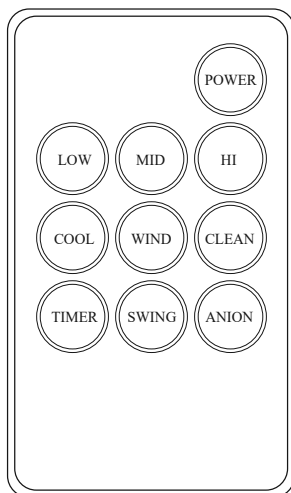

MAINTENANCE

For best results and long term operation, regular maintenance is essential.

To ensure the cooler delivers fresh and clean air, regularly change the water when dirty, and clean both the dust filter and the cooling pad.

1. Remove the filter pad by unscrewing the 4 screws on the rear of the cooler. Then lift the pad and pull out at the bottom to release. To replace the pad, slide up into the slot under the top of the cooler, push in at the bottom; and allow to drop into the lower slot.
2. Clean the pad from the inner-side to out-side of pad (inner side is towards motor). Never use any liquid detergent. Never use pressurized water, as it may cause damage to the pad.
3. Unscrew the drainage lid to let dirty water flow out, then clean the water tank thoroughly with a soft cloth. Wash off dirt on the water sensor, water pump and the float valve. Rinse thoroughly.
4. Use mild soap and soft clean cloth when cleaning the cooler casing. Do not use any caustic chemical detergent that may cause damage to the surface of the cooler.
5. To prevent buildup of algae and other biological organisms in the reservoir, regularly add chlorine/bromine tablets as per tablet manufacturer recommendation for evaporative cooler reservoirs.

TROUBLE SHOOTING

Malfunction	Reason	Remedy/Solution
Operating screen Stays dark	<ul style="list-style-type: none"> -No power -Main control board failure -Fuse is blown -panel failure 	<ul style="list-style-type: none"> -Check unit is plugged in -Change control board -Change fuse -Change panel
Display is normal but without air flow or the air speed is too low	<ul style="list-style-type: none"> -The fan is jammed -Cooling pad or dust filter is blocked -Fan is distorted -Main control board failure 	<ul style="list-style-type: none"> -Check to ensure there is nothing preventing free rotation of the fan -Clean the cooling pad and dust filter -Change the fan -Change the main control board
Motor does not Respond to control Panel	<ul style="list-style-type: none"> -Main control board Failure -Panel failure 	<ul style="list-style-type: none"> -Change the main control board -Change panel
Water leaking From drain valve	<ul style="list-style-type: none"> -Drain valve is loose -Dirt in valve 	<ul style="list-style-type: none"> -Tighten drain valve nut -Clean drain valve
Air diffuser/swing Function not working	<ul style="list-style-type: none"> -Synchronous motor is burnt out -Crankshaft is broken 	<ul style="list-style-type: none"> -Change synchronous motor -Change crankshaft
Water drops splash Out of the air diffuser	<ul style="list-style-type: none"> -Water pipe has come loose 	<ul style="list-style-type: none"> -Check water pipe to top of filter pad and reattach or tighten as necessary

NOTE: This troubleshooting is for reference purposes only. If any technical assistance is needed, Please contact your distributor for service/rep

Distributed in Australia by



CONTACT DETAILS

B.A.R Group P/L
15 Hudson Place,
Mulgrave, NSW, Australia 2756
Phone: 02 4577 2144
www.bargroup.com.au

Distributed in New Zealand by



POWER EQUIPMENT

CONTACT DETAILS

BE Pressure Supply
541D Te Rapa Road, Te Rapa,
Hamilton 3200, New Zealand
Phone: 07 849 0000
www.bepressure.co.nz

Errors and omissions excepted.
Specifications and performance may change.
Version 5.1; 2021